


WeatherTech®

E-Z-GO Golf Cart Mat Installation Instructions

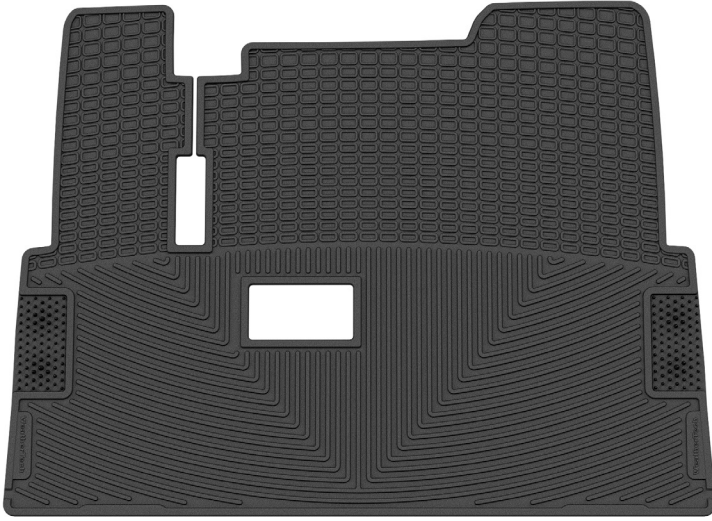

 Install Video



1
Make sure key is in off position, and the brake pedal is in the locked position. Clear your golf cart floor of dirt and debris.



2
Locate the pedal box opening on your WeatherTech Golf Cart Mat. The opening will completely surround your gas pedal. Place the mat over this area first.



3
Bend and tuck the passenger side of Golf Cart Mat up and under the dash.



4
Bend and tuck the driver's side of Golf Cart Mat under the brake pedal and dash.
Note: Factory horn, if present, will be fully functional with mat in place.



5
Make sure your Golf Cart Mat lays completely flat on the surface of your cart. Adjust as needed. Your new WeatherTech Golf Cart Mat is now installed!

Optional horn cut out placement may vary. Please use this as a guide only.

