




DASH-0096 and DASH-0097 Club Car Precedent 2008.5+, Tempo, Onward Installation Instructions

Step 1: Remove dash trim by removing the (4) Torx Bolts holding it in place. Retain hardware and trim.



Step 2: Insert dash, bottom side first into the space behind the tee holders.

NOTE: On most carts, the top of the dash will easily rest against the trim area. If it does not, trim the brow slightly.

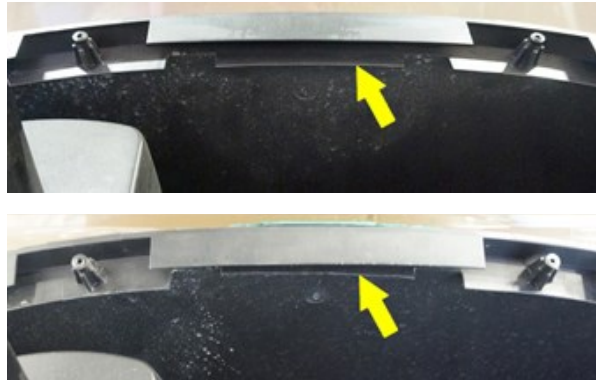

Step 3: Starting on one side, pry the plastic that was behind the trim over the top lip of the dash using a flat screwdriver or similar tool.



Step 4: Insert the "Christmas Tree" Rivets through the tee holder and into the two pre-drilled holes on the bottom of the dash.

Note: The dash skin may be covering the holes.



Step 5: Reinstall the dash trim using the original hardware.



Step 6: Place warning sticker in the appropriate spot. The electric sticker is shown on top below and the gas sticker on the bottom.



This completes the installation of the dash on your Club Car Precedent, Onward, or Tempo. Please enjoy safely!