




LGT-590 Relay Harness Retrofit Option

Deluxe Turn Signals

Installation Instructions

Tools Needed For Installation:

- Pliers
- Electrical Tape or Heat Gun

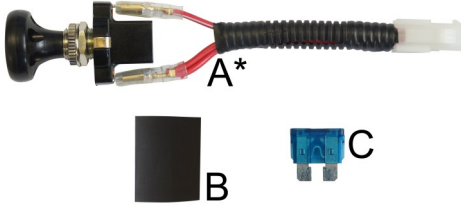



Contents of LGT-590 Retrofit Kit:

- A* (1 ea.) Push-Pull Switch Harness
Not included with LGT-590 Kit.
Part of Deluxe Harness.
- B (1 ea.) Heat-Shrink Tubing
- C (1 ea.) 15 Amp Fuse

Before You Start

1. Turn the key to the OFF position.
2. Place the TOW/RUN switch in the TOW position (electric carts).
3. Engage the parking brake.


Retrofit Kit Preparation

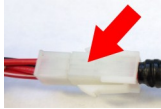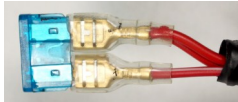1. Disconnect the push-pull switch at the 4-pin connector from the deluxe harness included in the light kit.
2. Remove the push-pull switch from the (2) spade connectors and discard.
3. Pull back the spade connector boots and use pliers to tighten the openings on the female spade connectors.
4. Insert the fuse into the female spade connectors. Make sure the connections are secure.

5. Further secure the fuse connection with one of two options:

Option 1: Heat-Shrink Tubing

Place the heat-shrink tubing around the fuse and spade connectors. Use a heat gun to carefully shrink the tubing.

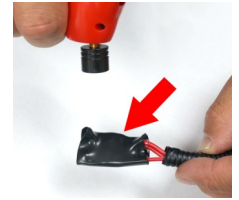

Option 2: Electrical Tape

Wrap electrical tape around the fuse and spade connectors.



Retrofit Kit Installation

1. Reattach the retrofit harness to the deluxe harness included with the light kit. This takes the place of the LGT-590 relay.

Your LGT-590 Retrofit Kit is now complete.
Please enjoy safely!




LGT-590 Relay Harness Retrofit Option

Deluxe Turn Signals

Installation Instructions

Tools Needed For Installation:

- Pliers
- Electrical Tape or Heat Gun

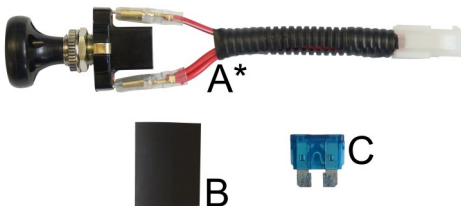


Contents of LGT-590 Retrofit Kit:

- A* (1 ea.) Push-Pull Switch Harness
Not included with LGT-590 Kit.
Part of Deluxe Harness.
- B (1 ea.) Heat-Shrink Tubing
- C (1 ea.) 15 Amp Fuse

Before You Start

1. Turn the key to the OFF position.
2. Place the TOW/RUN switch in the TOW position (electric carts).
3. Engage the parking brake.

Retrofit Kit Preparation

1. Disconnect the push-pull switch at the 4-pin connector from the deluxe harness included in the light kit.
2. Remove the push-pull switch from the (2) spade connectors and discard.
3. Pull back the spade connector boots and use pliers to tighten the openings on the female spade connectors.
4. Insert the fuse into the female spade connectors. Make sure the connections are secure.

5. Further secure the fuse connection with one of two options:

Option 1: Heat-Shrink Tubing

Place the heat-shrink tubing around the fuse and spade connectors. Use a heat gun to carefully shrink the tubing.



Option 2: Electrical Tape

Wrap electrical tape around the fuse and spade connectors.



Retrofit Kit Installation

1. Reattach the retrofit harness to the deluxe harness included with the light kit. This takes the place of the LGT-590 relay.

Your LGT-590 Retrofit Kit is now complete.
Please enjoy safely!