


04/02/25

READ THROUGH INSTRUCTIONS BEFORE BEGINNING. DO NOT FULLY TIGHTEN BOLTS UNTIL INSTRUCTED.

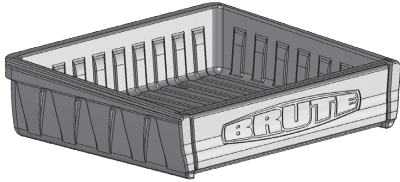

MODEL YEARS 1994 and Up:

Cargo Bed: 8402 Strut Kit: 81/84TX SK P

STEP 1: Prepare Car for Installation




Remove the following:


- top
- rear struts
- bench back cushion
- bag rack assembly
- rear bumper

STEP 2: Attach Cargo Bed Upright Supports

Cargo Bed Supports
Mount on outside holes of Bumper Channel, making sure that the curve faces away from bumper channel.

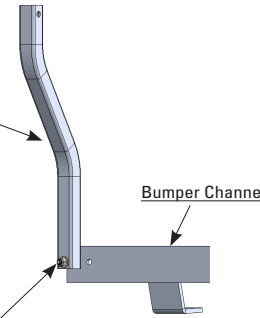

TXT 1994-2013

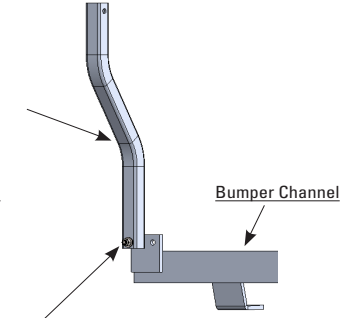

TXT 2014+

- 1/4" x 1 3/4" Hex Bolt
- 1/4" Flat Washer (front)
- 1/4" Flat Washer (rear)
- 1/4" Nyloc Nut (2 x Both Sides)

1) Attach the cargo bed upright supports to the outside holes of the Bumper Channel. Make sure the curved part of the supports face away from the Bumper Channel. Hand-tighten hardware only.

DO NOT FULLY TIGHTEN

STEP 3: Mount Bumper Channel



1) Mount Bumper Channel over bumper. Align Bumper Channel tabs with original holes in the car bag well and install.


NOTE: The cargo bed upright supports from step 2 should rotate around and hang down towards the ground.

FULLY TIGHTEN BOLTS IN BAG WELL ONLY

- 5/16" x 1-1/2" HEX Bolt
- 5/16" Flat Washer (top)
- 5/16" Flat Washer (bottom)
- 5/16" Nyloc Nut (Both Holes)


PROPRIETARY & CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DOCUMENT IS THE SOLE PROPERTY OF CUSTOM GOLF CAR SUPPLY. ANY REPRODUCTION IN PART OR AS A WHOLE, WITHOUT THE WRITTEN PERMISSION OF CUSTOM GOLF CAR SUPPLY IS PROHIBITED.

STEP 4: Mount Seat Back/Base Support

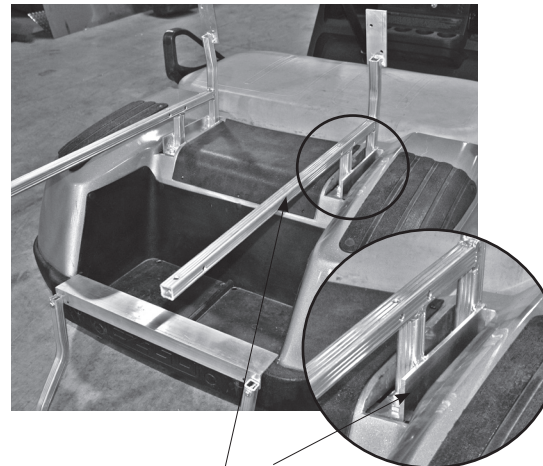

Seat Back/Base Support

NOTE: Flat edge should face to the outside.

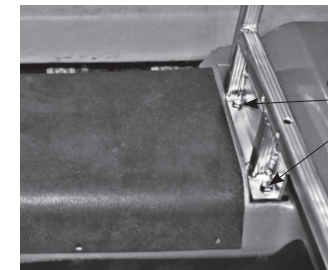

- 3/8" x 1" HEX Bolt (2x Both Sides)

1) Mount Seat Back/Base Support in original holes where bag rack was removed.

NOTE: Each support should be mounted with the flat edge facing out.

DO NOT FULLY TIGHTEN

04/02/25

READ THROUGH INSTRUCTIONS BEFORE BEGINNING. DO NOT FULLY TIGHTEN BOLTS UNTIL INSTRUCTED.**STEP 5: Install Seat Back Cushion**

1) Install the factory seat back cushion. Once the seat back is installed, fully tighten seat back bolts only.

1/4" x 1" HEX Bolt
1/4" Flat Washer
(2x Both Sides)

FULLY TIGHTEN SEAT BACK BOLTS ONLY**STEP 6: Mount Cargo Bed Base**

1/4" x 2-1/2" HEX Bolt
1/4" Flat Washer (front)
1/4" Flat Washer (back)
1/4" Nyloc Nut
(Both Sides)

1) Connect the cargo bed upright supports to the seat back/base supports. The upright supports should be on the outside of the base support. NOTE: when tightening bolt, lift upward on the base support to make it flush with the top of the upright support.

**FULLY TIGHTEN ALL LOOSE BOLTS
(INCLUDING ALL PREVIOUS STEPS,
ESPECIALLY STEPS 2 & 4)****STEP 7: Reinstall Factory Top****IF YOU ARE NOT REINSTALLING THE FACTORY TOP, SKIP TO STEP 8.**

1) Mount rear strut kit to seat back/base supports.

NOTE: Rear strut kit is NOT included with the cargo bed and must be purchased separately.

TXT (1994 & UP):
8102 SK PC


HAND TIGHTEN ONLY:
1/4" x 2-1/2" HEX Bolt
1/4" Flat Washer (front)
1/4" Flat Washer (back)
1/4" Nyloc Nut
(2x Both Sides)

(Hardware provided with strut kit)



2) Align factory top with front frame and rear struts. Reinstall top using the original top hardware. Do not fully tighten hardware until all bolts have been installed.

(Use original top hardware)

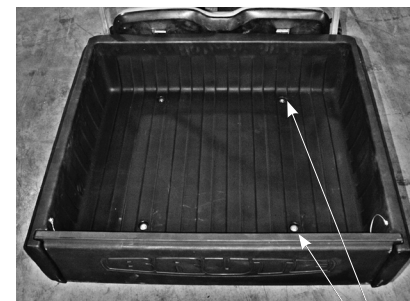**FULLY TIGHTEN ALL
LOOSE BOLTS****DO NOT FULLY TIGHTEN REAR STRUT BOLTS UNTIL TOP IS INSTALLED****STEP 8: Mount Cargo Bed**

1) Align the four holes in cargo bed with the four holes in the H-frame. Mount cargo bed using stainless steel hardware.

5/16" x 3-1/4" SS HEX Bolt
Special thick SS Washer (top)
5/16" Flat Washer (bottom)
5/16" Nyloc Nut
(2x Both Sides)

FULLY TIGHTEN BOLTS